

# Safety Instructions Cassette

## Safety Instructions

### 1. Handling

Handle the cassette carefully and avoid impacts to prevent damage to the delicate tape.

Do not forcibly pull or open the tape, as this can cause irreparable damage.

Insert the cassette only into suitable playback devices to avoid tearing the tape or damaging the device.

### 2. Cleaning

Clean the cassette housing if necessary with a soft, dry cloth.

Do not use cleaning agents or liquids, as they may damage the tape.

### 3. Storage

Store the cassette in its case to protect it from dust, moisture, and direct sunlight.

Keep the tape in a dry place at room temperature (10-25 °C). Extreme heat, cold, or high humidity can render the tape unusable.

Avoid magnetic fields (e.g., speakers), as they can erase the data on the tape.

### 4. Safety Warnings

Tapes contain small parts and are not suitable for children under 3 years old. Keep them out of children's reach to prevent injury or swallowing.

Do not apply pressure to the cassette housing to prevent cracks or breaks.

#### Disclaimer:

The manufacturer assumes no liability for damage or injury resulting from improper handling or use of the cassette. Please follow these instructions to ensure safe and long-term use.